

*innovatronix*

**VOLLEYBALL  
SCOREBOARD**



**User's Guide**

Company Name: INNOVATRONIX INC.

Contact Nos.: +632 8571 8621 / +63 2 8661 4108

Email Address: [info@innovatronix.com](mailto:info@innovatronix.com)

Website: [www.innovatronix.com](http://www.innovatronix.com)

Shopify Store: [www.innovatronixshop.com](http://www.innovatronixshop.com)



## Foreword ▶▶▶

Innovatronix Volleyball Scoreboard is a portable electronic scoreboard used to keep track set won in volleyball games.

***Game, set, match! Scorekeeping made easy with our Portable Volleyball Scoreboard.***

- ✓ Customizable team names.
- ✓ Displays scores, set won, time out left, set and coach timer.
- ✓ Use any TV display with an HDMI port (user provided).
- ✓ Coach Timer (Optional): used by the coach for practice games.
- ✓ With battery backup in case of a sudden power outage to record scores.

## Caution ▶▶▶

⚠ Do not make any changes or modifications to the product unless otherwise specified on this manual. Should there be any changes and modifications made, you could be required to stop the operation of the equipment.

⚠ Innovatronix shall not be liable for any damages or problems arising from the usage of any options, accessories, or any products other than those designated for the product itself.

⚠ The customer uses this product at his own risk and Innovatronix and/or the seller will not be held liable under the damage or injury, including but not limited to loss of properties, directly or indirectly from the use of the product.

## Table of Contents ▶▶▶

<b>01</b>	Important Safety Instructions	01
	What is exactly in the Box?	02
	Nomenclature	02
	Key Buttons and Features	04
<b>02</b>	How to Setup?	05
	How to Operate?	06
<b>03</b>	Technical Specifications	07
	How to Customize Team Names?	07
	Troubleshooting	08
<b>04</b>	Warranty and Service	09
	Replacement Policy	10
	Warranty Card	11

## Important Safety Instructions ▶▶▶

Before operating Innovatronix Volleyball Scoreboard, please read this manual and all the safety instructions thoroughly and retain it for future reference.

### Safety Instructions

- ⚠ Do not operate with wet hands.
- ⚠ Never immerse the Innovatronix Volleyball Scoreboard in water or other liquids.
- ⚠ Do not use the Innovatronix Volleyball Scoreboard under direct sunshine.
- ⚠ Arrange all equipment before operation.
- ⚠ Immediately replace stripped-off power supply cable.

### Basic Installation

- ⚠ Handle the equipment with care when transferring the unit from one location to another.
- ⚠ Do not place heavy objects on top of the Innovatronix Volleyball Scoreboard.

### How to Maintain Innovatronix Volleyball Scoreboard?

- Turn off and unplug Innovatronix Volleyball Scoreboard before cleaning.
- Use a dry cloth when cleaning the unit.
- Do not use any liquid or detergents.
- Turn off the unit when not in use.
- Notify a qualified technician for repairs.

## What is exactly in the Box? ▶▶▶

x1 Innovatronix Volleyball Scoreboard Main Controller

 
x1 HDMI Cord, 8 Meters

x1 HDMI Cord, 1 Meter


x1 Power Cable (DC 5V)




## Nomenclature ▶▶▶

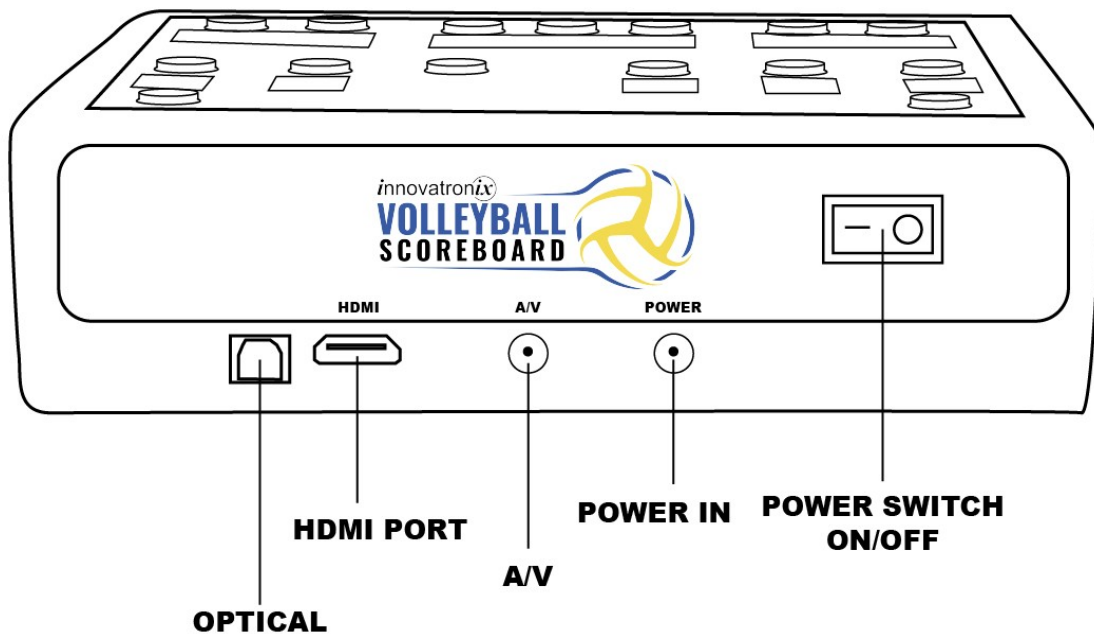

## Innovatronix Volleyball Scoreboard Rear Panel

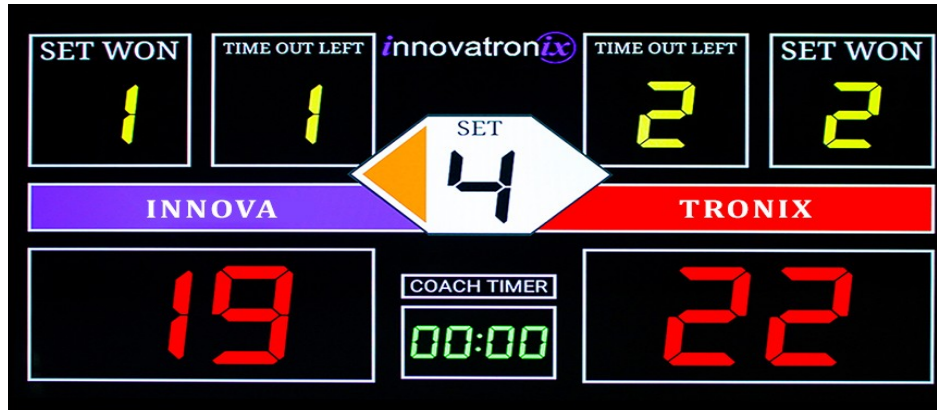 

 \*\*\*Sample LED TV Display. TV not included in the package

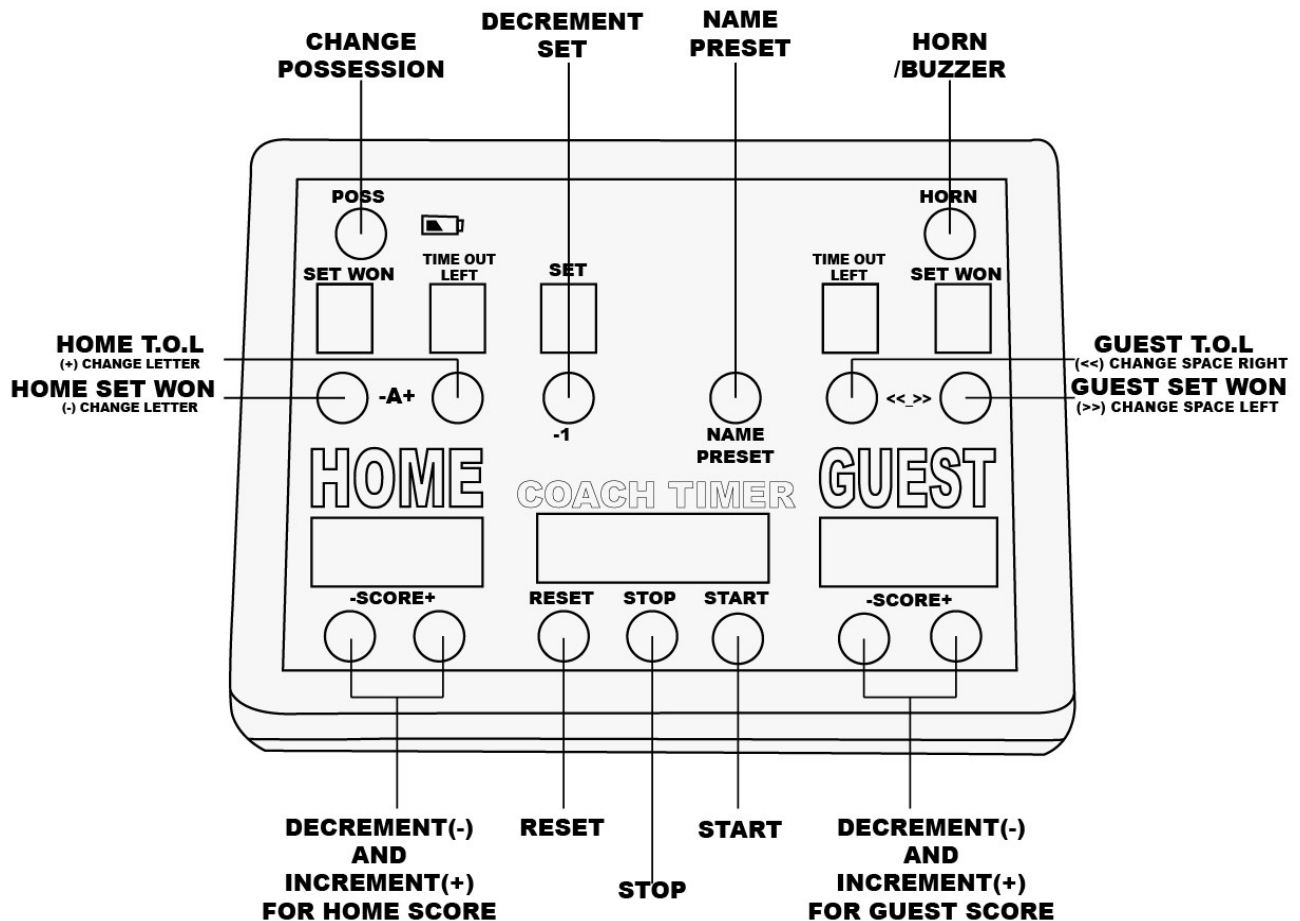


## Innovatronix Volleyball Scoreboard Front Panel

## Key Buttons and Features ▶▶▶

Name Preset	Hold Name Preset for five (5) seconds Name Preset button to customize team names; Press once while in Preset Mode to return to Running Mode.
Reset Button	Resets the Coach Timer.
Stop Button	Stops the Coach Timer.
Start Button	Starts the Coach Timer (Count Up/Ascending Order).
Increment (+) and Decrement (-) for Home Score	Increases or decreases the displayed value for Home's Score during Running Mode.
Increment (+) and Decrement (-) for Guest Score	Increases or decreases the displayed value for Guest's Score during Running Mode.
Set (-1)	Reduce the Game's Set.
Home Set Won (-A)	Reduce the Home's number of set won.
Guest Set Won (>>)	Reduce the Guest's number of set won.
Home Time Out Left Button (A+)	Changes the Home's timeouts left from 2 to 0 during running Mode.
Guest Time Out Left Button (<<)	Changes the Guest's timeouts left from 2 to 0 during running Mode.
Horn Button	Press for game time out buzzer/horn sound.
Poss Button	Press to switch ball possession status on display.
 
## How to Setup? ▶▶▶

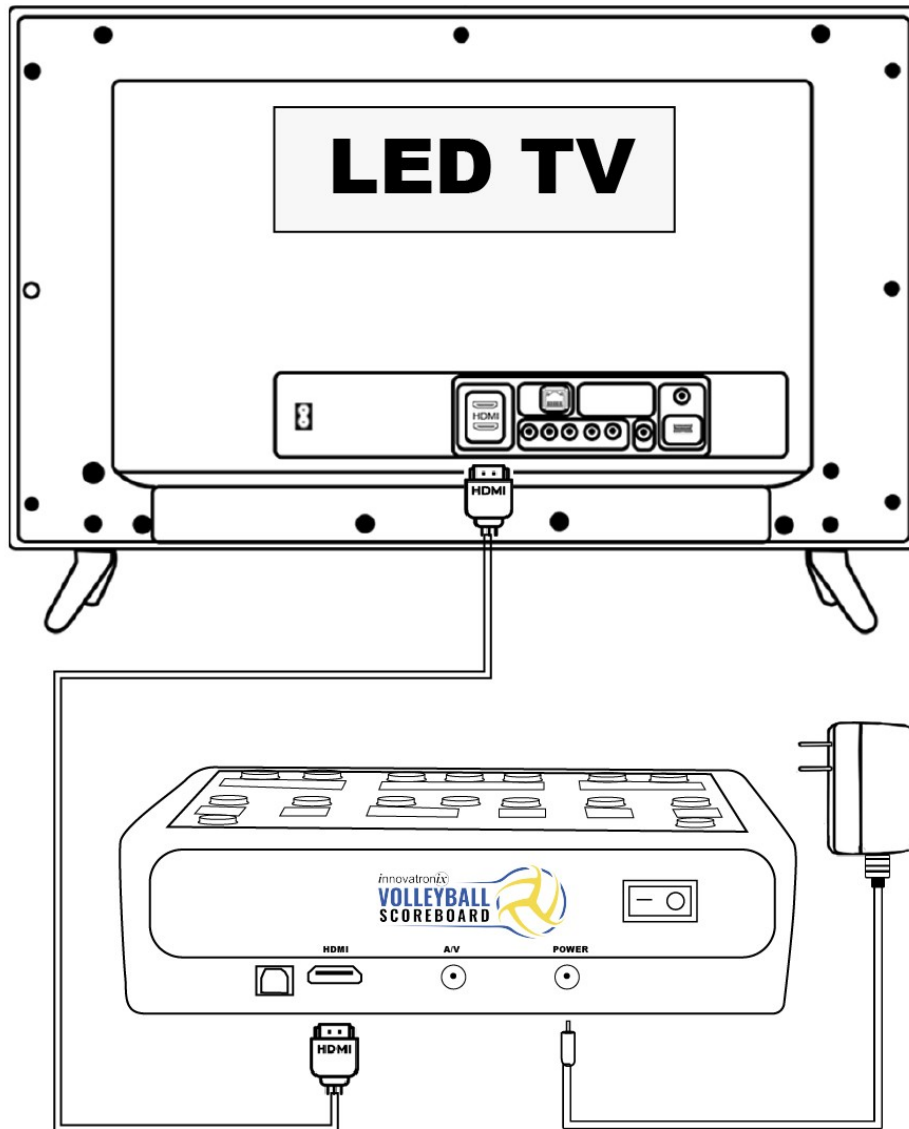

1. Plug the power cord (DC 5V) and switch ON the Main Controller.

Make sure the TV Display is also switched ON and the right HDMI is set.

**Note:** The Power Supply should be plugged in all throughout the game.

2. Connect the HDMI cable to the Main Controller and to the LED Monitor or TV Display.

3. Set the Team Names.



## How to Operate? ▶▶▶

1. Assure that all equipment was carefully set up, all connectors were properly attached, and all parts were switched on.
2. The **HOME Score ( - or + )** buttons will increment or decrement the Home Player Score.
3. The **GUEST Score ( - or + )** buttons will increment or decrement the Guest Player Score.
4. The **HOME SET WON ( - A )** button will decrement the win count of the Home Player.
5. The **GUEST SET WON ( >> )** button will decrement the win count of the Guest Player.
6. The **HOME TIME OUT LEFT ( + )** button will decrement the Time Out Left count of home player.
7. The **GUEST TIME OUT LEFT ( << )** button will decrement the Time Out Left count of Guest Player.
8. The **SET ( - 1 )** button will decrement the set count of the game.

Tip: Use the Coach Timer for practice games.

## Technical Specifications ▶▶▶

Dimensions (inches)	: 7.25" (L) x 5.25" (W) x 2.12" (H)
Dimensions (centimeters)	: 18.41 cm (L) x 13.20 cm (W) x 5.33 cm (H)
Main Controller Digit Size	: 0.5 Inch
Main Controller Digit Color	: Red
Product Weight	: 0.52 kg / 1.14 lbs
Power Supply	: DC 5V

## How to Customize Team Names? ▶▶▶


1. Press and hold the “NAME PRESET” button for 5 seconds. Your screen will show a blinking line as an indication that you can start changing the team names.




2. To select alphanumerical character, use the “SET WON” and “TIME OUT LEFT” buttons on the upper left portion of the controller. It has a “ - A +” label.



3. To select the space you want to change, use the “SET WON” and “TIME OUT LEFT” buttons on the upper right portion of the controller. It has a “ << \_ >>” label.

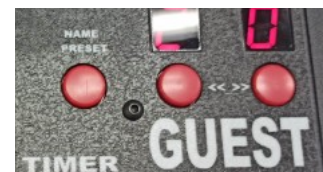

4. Press the “NAME PRESET” button to save changes.

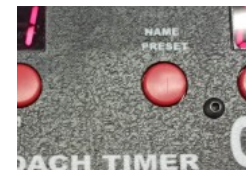

## Troubleshooting ▶▶▶

- ⚠ Contact the authorized service technician for repair.
- ⚠ Tampering the unit will cause the voiding of the warranty.

This section describes probable system issues, identifies potential causes, and offers corrective action. This list may not contain every conceivable issue, but it does reflect some of the most frequent circumstances that may arise.

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
No display and no power light on display receiver	Power cord is not properly plugged to power source	Properly plug in the power cord to an appropriate power source
	Power supply does not work	Replace power supply
No power at controller and garbled display at power failure	Back-up battery at controller is discharged	Plugin controller to charge the battery when power resumes

Turn off the unit and notify a qualified technician or contact our customer service hotline when any of the following occurs:

- Liquids gets through the internal parts of the unit.
- The unit has been dropped and some parts appear to be damaged (push buttons, power switch, power cord, etc.)
- Some of the LEDs on the Main Controller fail to light up.
- The scoreboard is not functioning properly according to its normal operations.

## Warranty and Service ▶▶▶

The Innovatronix Volleyball Scoreboard is covered by a one-year warranty starting from the date of purchase. From that date, the product should be free of any defect in material and workmanship and it will function in accordance with its stated performance.

Within this period, Innovatronix Inc. will replace defective parts. This warranty only covers failure due to manufacturing defects and workmanship. Hence, breakdown of the product due to gross abuse, use with non-recommended equipment or devices and normal wear and tear are not covered in this warranty.

There are no warranties by use except as stated therein. For unsafe and/or faulty repairs, Innovatronix Inc. and/or sellers shall not be liable for such cases. Any alteration made to this product by unauthorized service technicians is the sole responsibility of the owner. The maximum liability for any breach of this agreement or other claim to use of this product shall not exceed the purchase price of the product by the customer.

Warranty registration is not required. Warranty is applicable if and only the product is used under normal conditions and for its intended purpose.

Product replacement policy may differ for every seller. Contact their customer service representative for satisfaction guarantee and officer for their warranty program.

## Replacement Policy ▶▶▶

In the event that you experience any issues or defects with your purchase, Innovatronix provides a replacement with a ONE (1) YEAR warranty from the date of purchase. Follow these steps to send an item for replacement:

1. Call or Message Innovatronix Customer Service.

Contact Number(s): +63 8661-4108 / +63 8571-8621

Email Address: [info@innovatronix.com](mailto:info@innovatronix.com)

2. You may contact us on our Facebook page. This expedites the resolution of any issues you might have.

<https://www.facebook.com/InnovatronixScoreboards>

3. Depending on the outcome of the consultation, Innovatronix Customer Service will assist you with any FedEx-based returns and/or subject for replacement.

Note: Remember to pack the item properly to prevent damage during transportation if you intend to ship it. When shipping, Innovatronix does not recommend utilizing packing peanuts. The same packaging applies with trade-in units for items over the warranty period.

**Manufactured in the Philippines**



**INNOVATRONIX INCORPORATED**

KM26 The Richdale Subd., Sumulong Highway,  
Brgy. Sta. Cruz, Antipolo City, Rizal, Philippines, 1870

**WARRANTY CARD**

(Customer's Copy)



This is to acknowledge the Warranty for Innovatronix Volleyball Scoreboard for a period of ONE (1) YEAR from the date of purchase. However, this warranty does not apply in case of defects resulting from negligence, misuse, abuse, tampering, and unauthorized repair affecting the performance of the unit.

\_\_\_\_\_  
Authorized Dealer

\_\_\_\_\_  
Authorized Signature

\_\_\_\_\_  
Date of Purchase

\_\_\_\_\_  
Serial Number

**IMPORTANT REMINDER**

**NO WARRANTY CLAIMS WILL BE ACCEPTED IF ANY OF THE THREE IS LACKING:**

1. Defective Item
2. Warranty card properly filled out by the dealer
3. Original proof of purchase



**Manufactured in the Philippines**



Contact Nos.: +632 8571 8621 / +63 2 8661 4108

Email Address: [info@innovatronix.com](mailto:info@innovatronix.com)

Website: [www.innovatronix.com](http://www.innovatronix.com)

Shopify Store: [www.innovatronixshop.com](http://www.innovatronixshop.com)

All rights reserved. No part of this publication may be copied, duplicated, or transmitted in any form, by any means, or otherwise without written permission from the manufacturer. The information contained herein is designed for the use of the Innovatronix Volleyball Scoreboard. The manufacturer is not responsible for any use of this information as applied to other scoreboards and other related products.

Copyright 2023 by Innovatronix Inc.